



Technical Service Bulletin

Release Bearing Installation Procedure

The slave cylinder you remove from the vehicle will appear similar to one of the two original-equipment designs shown below.




This procedure provides instruction for bearing installation on slave cylinders that include a spring boot assembly and plastic spacer.



1. Press down on the bearing to remove the retaining ring and two washers. Discard the ring and washers.

2. Remove the bearing, spring boot assembly and plastic spacer



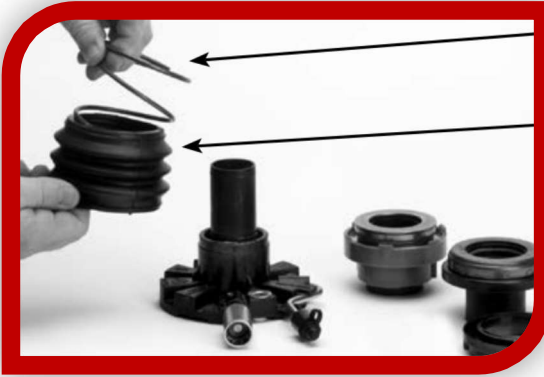

3. Remove the slave cylinder spring from the boot assembly, discarding the rubber boot, release bearing and plastic spacer.

4. Seat the new release bearing assembly on the slave cylinder spring and install the assembly on the slave cylinder.



5. Press down on the bearing to install the new retaining ring, included in the clutch set.

The slave cylinder is now ready for installation!

