




Technical Service Bulletin

Important installation information about BMWs with self-adjusting clutches


The self-adjusting clutches for some BMW applications include a shipping plate. This plate must not be removed prior to installation. If the plate is removed prematurely, the clutch will self-adjust and become completely unusable. Removal of or tampering with the shipping plate will void the warranty.

Follow the instructions below for proper installation:

- Installation of these self-adjusting clutch sets requires a two piece installation tool, included in the kit.
- Detach the threaded bolt and insert the body of the installation tool into the flywheel pilot bearing. (Fig. 1)

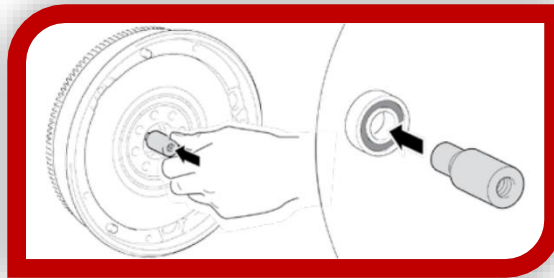

- Install the clutch and disc. Insert a 14 mm. hex-head wrench into the clutch shipping plate center hole and turn it counter-clockwise to remove. Discard the plate. (Fig. 2)

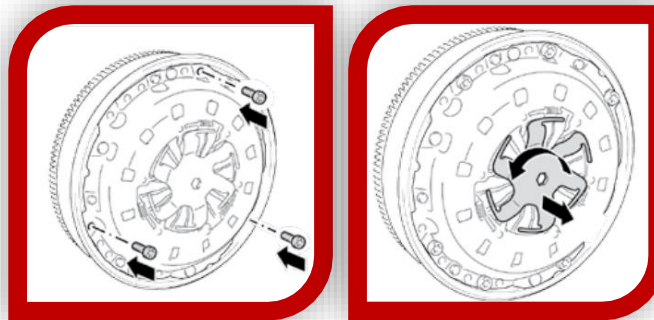

- Thread the bolt into the installation tool body and remove the tool. Complete the clutch installation according to vehicle manufacturer's specifications. (Fig. 3)

